


Edgehax 4G LTE, Wi-Fi and Bluetooth Pinout

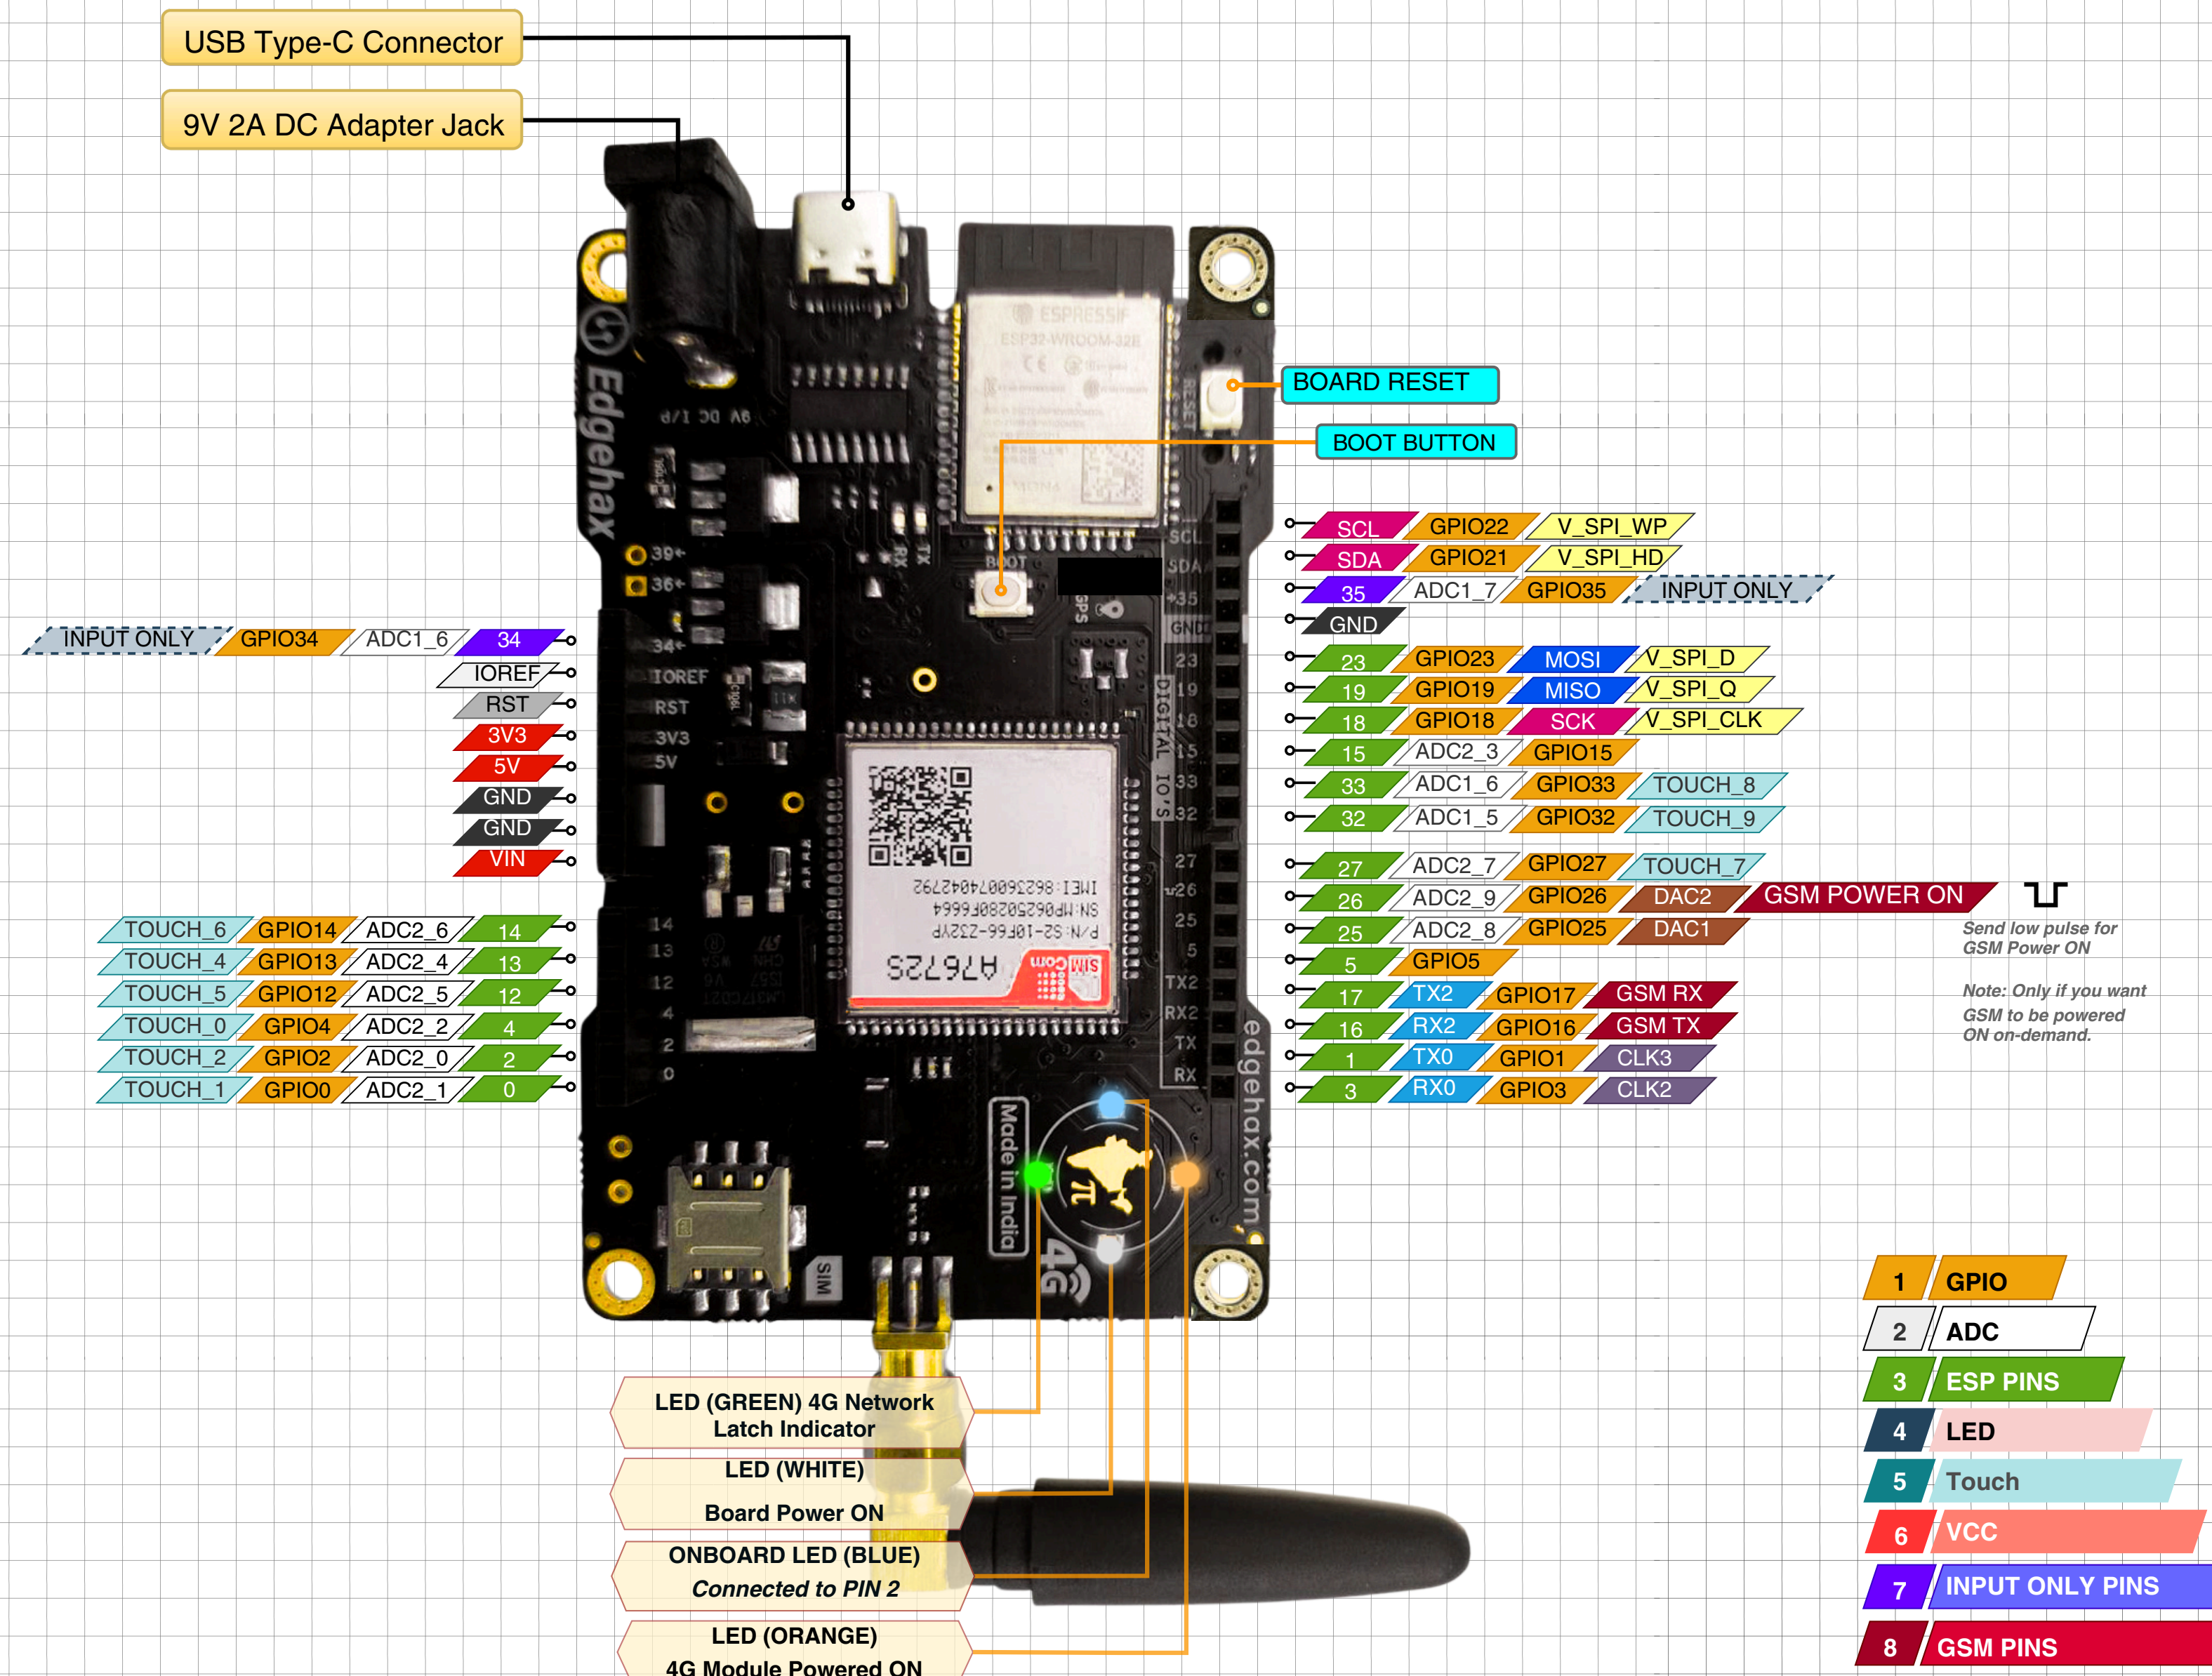

INPUT

- USB Type-C
- 9V 2A DC

Power ON 9V 2A DC Power Adapter need to be connected for powering ON 4G module as it may require a peak current of upto 2A during boot-up and network operations.



Arduino




ESP-IDF



Platform IO



Micro Python

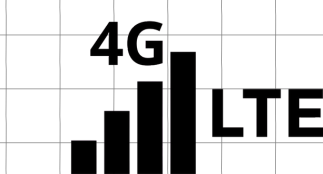

Library for 4G LTE Module using Arduino IDE

Download TinyML library for 4G/LTE - AT command based communication through the microcontroller.

<https://github.com/vshymanskyi/TinyGSM>

SIMCOM A7672S - AT COMMAND Manual

Refer SIMCOM A7672S FASE AT Command sets from the below website link.

<https://bit.ly/simcom7672>

